


COMMON ERROR CODES

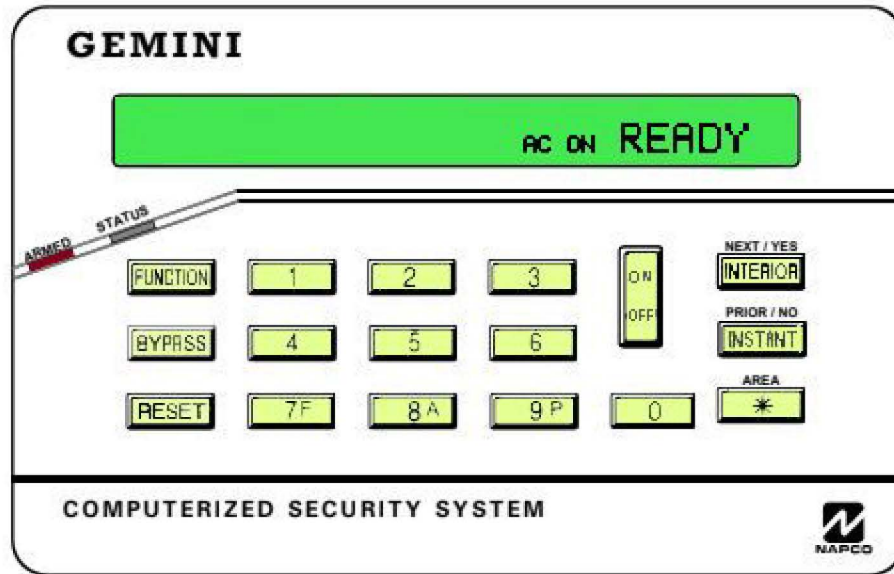

NN= Zone Number

E01-00	AC Power Failure	E02-00	System Low Battery
E03-00	Communication Failure	E04-NN	RF Transmitter Failure
E05-NN	RF Transmitter Low Battery	E06-NN	Receiver Response Failure
E10-NN	Keypad Response Failure	E11-NN	Keypad Tamper Condition
E15-NN	RF Transmitter Tamper	E16-NN	Receiver Jammed
E17-NN	Receiver Tamper	E18-NN	Keyfob Low Battery
E19-NN	User Program Memory Error		