

# HONEYWELL COMMON ERROR CODES



**Comm Failure:** System is not communicating due to failure with telephone line **Low**

**Bat:** System Battery is Low

**Low Bat + Zone Number:** Low battery in wireless receiver

**Rcvr Jam (or Check 90):** RF interference in wireless system

**Alarm 1xx, Fault 1xx, Check 1xx:** Communication failure between control and connected device (xx being zone number)

**Modem comm / CC:** Control is on line with central station's remote computer

**Bell Failure (or check 77):** Wiring to external sounder is at a fault

**AC Loss:** System is working on battery power only. Check circuit breakers and fuses.

**Open Circuit (OC):** Keypad is not receiving signals

**Long Rng Trbl:** Back up communication device (if used) has failed.

**Telco Fault (or Check 94):** Problem with telephone line.

**Busy Standby (or dl):** If this message is displayed for more than one minute, then the system is disabled.